

TWS WIRELESS STEREO SPEAKER

mookiz
USER MANUAL

 
TWS WIRELESS STEREO SPEAKER Hi-Fi Stereo Speaker



Product Specifications

Wireless version: 5.3
Rated power: 8W
Driver unit: 40mm
Impedance: 4Ω
Battery capacity: 600mAh*2
Charging time: 2H
Input: USB-C DC5V=1A
Standby time: 12 Month
Transmission distance: 10M
Frequency response: 80-20Khz
Playing time: 50% volume 4 hours
Product size: 165*78.5*49mm
Product net weight: ≈290g

Product Diagram



- ① ③ Power Switch /Pause/Play Button
② ④ Light Button ⑤ USB-C Charging Port

Connect via Bluetooth



Allow New Connections

1. Power on-Press and hold for 3s;
2. Enable Bluetooth on your device and search for pairing;
3. Select 'mookiz' on the Bluetooth list;
4. Once paired, you can see the connected status on your device;

1

2

Button Control

Button	Operation	Function
	Press and hold for 3s	On/Off
	Press x1	Play/Pause

Bluetooth Mode (Press two buttons simultaneously)

	Press x1	Disconnect/Reconnect
	Press and hold for 5s	Clear last paired device

Light Mode

	Press x1	Switch light mode
	Press and hold for 3s	Lights off


There are a total of five lighting modes.
The default value is the white breathing indicator light when it is on.

TWS mode
If Speaker L and speaker R are both turned on, TWS will automatically pair.

Charging Precautions

Indicator	Status
Red light	Charging
blue light	Fully charged

To preserve battery lifespan, fully charged at least once every 45 days.

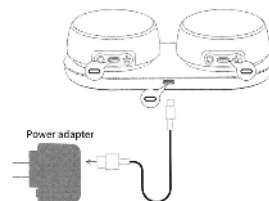

1. Connect the USB-C charging port of the base to charge the L/R speakers.
2. You can also charge by connecting to the USB-C charging port of the speaker separately.

Warning

- Do not drop, disassemble, deform, modify or insert any objects into this product as operating damage may result.
- Do not attempt to repair, modify or disassemble the product yourself. This product does not contain any user-serviceable components and may void the warranty.
- Do not clean the product with alcohol, ammonia based cleaners and abrasive cleaners.
- Do not place this product in to contact with any sharp objects as this may cause scratches and operating damage.
- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Dispose of the product and the product's battery in accordance with local laws and regulations.
- Do not place put flame source near the product.
- Use the specialized adapter for charging.
- Avoid using in damp or corrosive environment.
- Do not touch metal or short circuit electrode.
- Please keep the product out of reach of children to avoid accidents.



<https://mookiz.com/user-manual/d55>

3

4

5