


WEARABLE WIRELESS SPEAKER USER MANUAL



mookiz

D70

What is Included

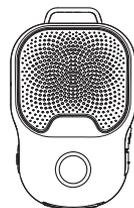

Wearable Speakers x1




Charging Cable x1



User Manual x1

Product Diagram

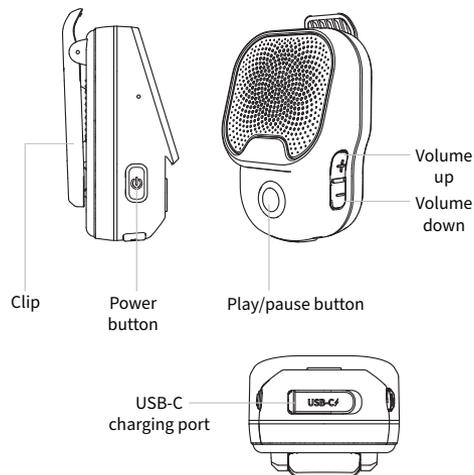

Product Parameters

| | |
|-------------------------------|---|
| Model | D70 |
| Bluetooth Version | 5.3 |
| Bluetooth Range | 40m |
| Frequency Response | 60Hz-20KHz |
| SNR | 65dB |
| Power Input | DC5V 1A |
| Play Time (100% / 70% Volume) | >10H (100% Volume) >30H (70% Volume) |
| Charging Time | 2H |
| Battery Capacity | 600mAh |
| Product Weight | 60g |


Charging Precautions

| Indicator | Status |
|-----------|---------------|
| Red light | Charging |
| LED off | Fully charged |

How to Pair(First Time)

Step 1

Press and hold the Power button for 2 seconds to turn on the speaker. The blue indicator light will flash, and the speaker will automatically enter Pairing Mode for the first-time setup.

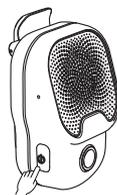

Step 2



Turn on the Bluetooth function on your cellphone, search for "D70", and tap to pair. A tone will sound once the first-time connection is completed.

Button Control

| Button | Operation | Function |
|--------|-----------------------|-------------------------|
| | Press and hold for 2s | On/Off |
| | Press × 1 | Play/Pause |
| | Press × 1 | Answer/Hang up the call |
| | Press and hold for 2s | Reject call |
| | Press × 2 | Dial the last call |
| | Press × 1 | Volume up |
| | Press and hold for 2s | Next track |
| | Press × 1 | Volume down |
| | Press × 1 | Volume down |
| | Press and hold for s | Previous track |

Bluetooth

| | | |
|--|-----------------------|--------------------------|
| | Press × 1 | Connect / Disconnect |
| | Press and hold for 5s | Clear last paired device |

TWS Mode

| | | |
|--|-----------|--------------|
| | Press × 2 | TWS on / off |
|--|-----------|--------------|

Warranty & Service

Start with your purchase of our products, we promise that the headphone has a one-year warranty service. Whether you have any questions about the product or any problems with the product, we will try our best to provide the solution for you.

Please feel free to contact us and we will reply within 24 hours!

The following two ways:

Customer Service Email: support@mookiz.com

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or in conjunction with any other antenna or transmitter.

⚠️ WARNINGS/WARNUNGEN/ADVERTENCIAS/AVERTISSEMENTS/AVVISI

1. Stop using the product if it's damaged.
2. Keep the product away from fire and heat sources.